


ULTRA-MINI CHARGE AMPLIFIER SERIES for Vibration Measurement

Model-4035




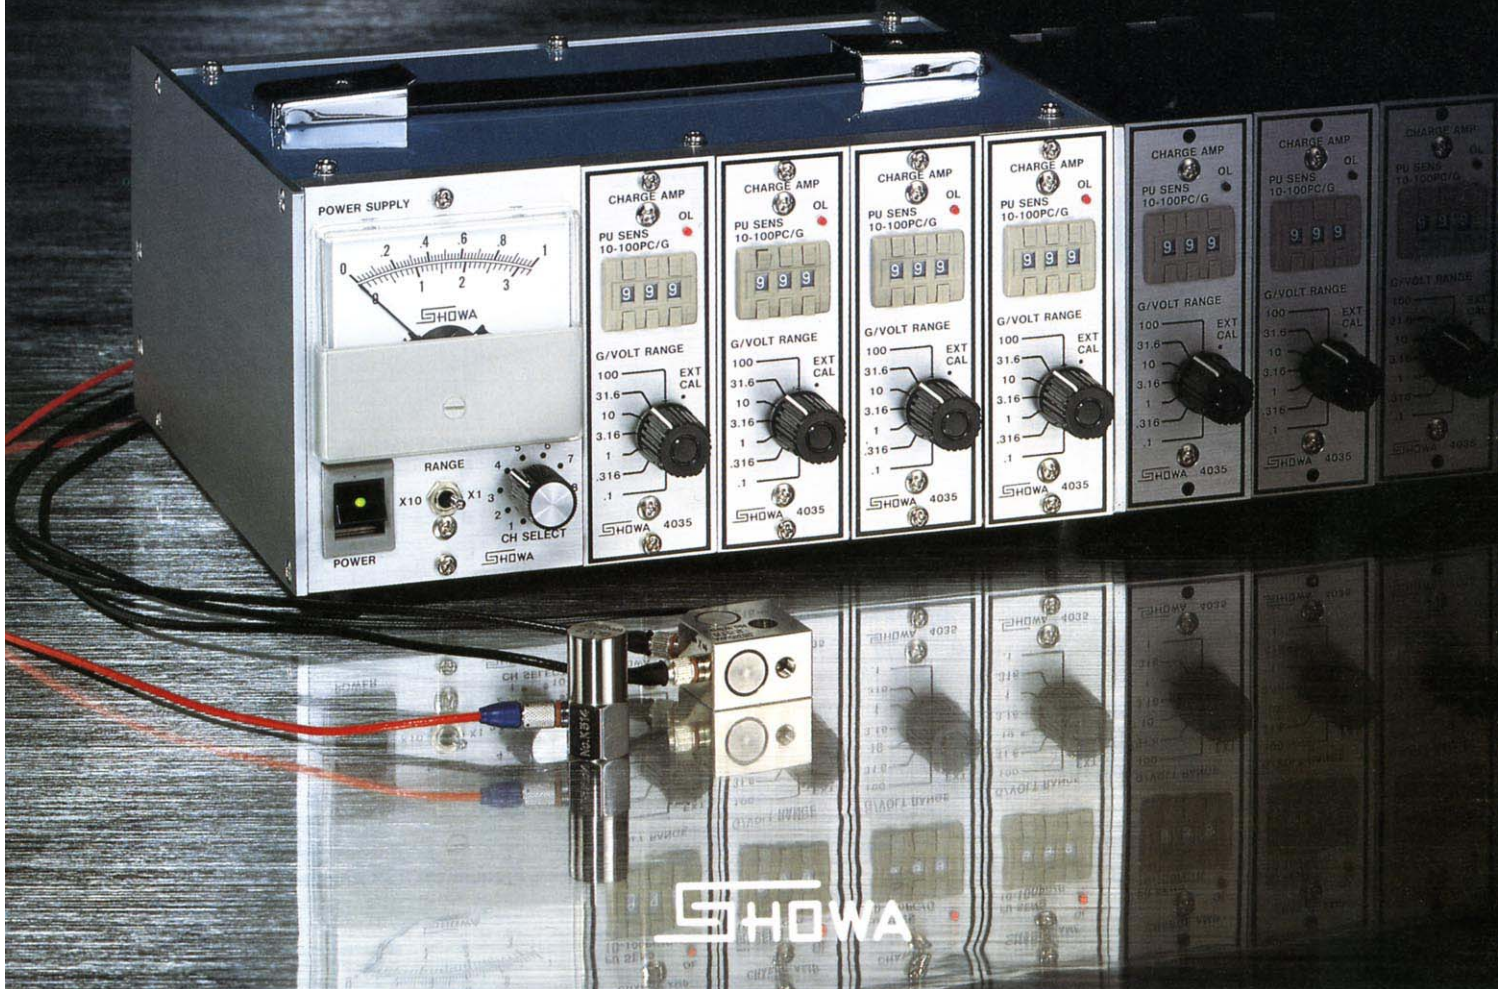

ULTRA-MINI CHARGE AMPLIFIER SERIES for Vibration Measurement

Model-4035

Model 4035 Charge Amplifier is to directly amplify output signals transmitted from piezo-electric type pickups for precise measurement of vibration.

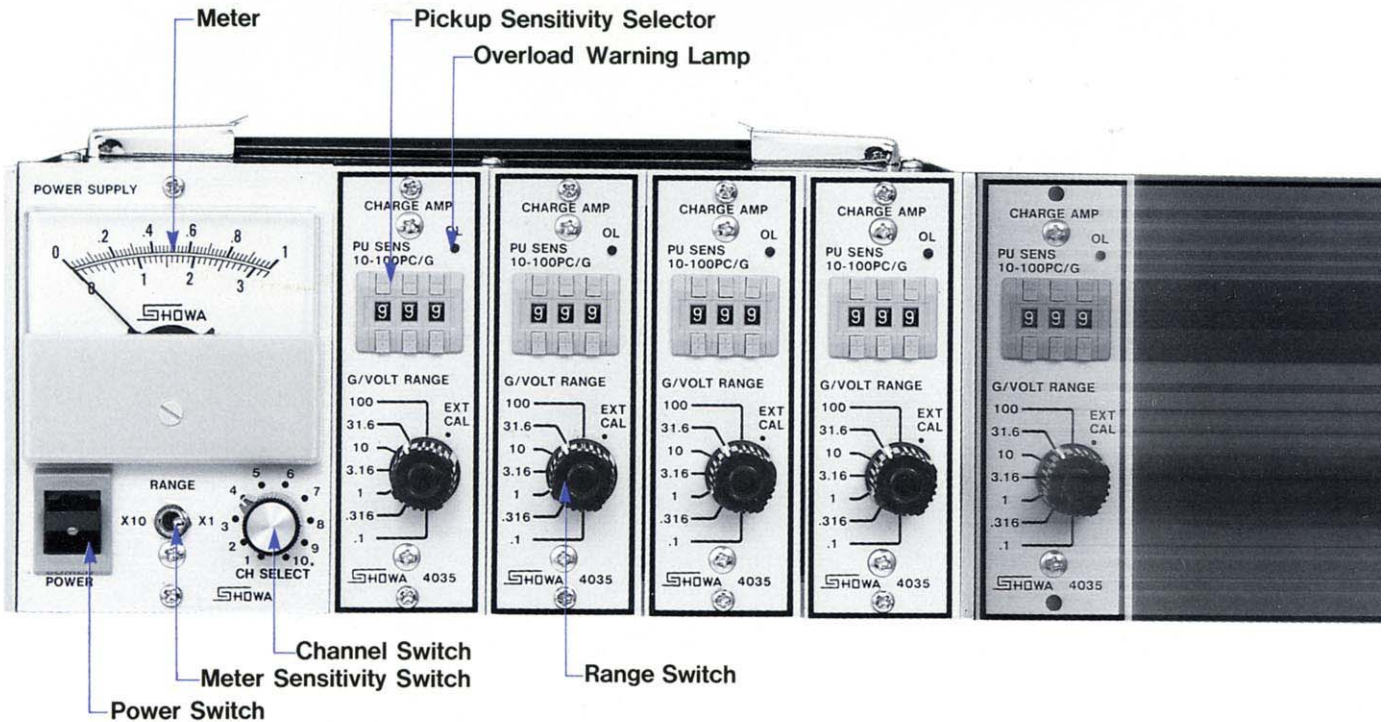

Modern charge amplifiers are aiming at small size and light weight, with simple operation and easiness in use. These requirements are perfectly met by our Model 4035 Charge Amplifier.

■ MODEL 4035 IS MOST SUITABLE FOR ANY APPLICATIONS WHERE A HIGHER S/N IS REQUIRED.


■ MODEL 4035 IS MOST SUITABLE FOR A COMBINED USE WITH PRECISE ANALYZING SYSTEMS.

■ ON ACCOUNT OF ITS COMPACT DESIGN, MODEL 4035 EXHIBITS EXCELLENT MOBILIABILITY IN VIBRATION MEASUREMENT OR DATA LOGGING .

■ A GAIN STABILITY OF 0.02%/°C (TYPICAL) IS NOW ACCOMPLISHED IN MODEL 4035 ON ACCOUNT OF THOROUGH QUALITY CONTROL THROUGHOUT WHOLE PROCESSES STARTING FROM SELECTION OF COMPONENTS AND ENDING AT DESIGN AND PLANNING.


LARGER DYNAMIC RANGE ATTAINED BY HIGHER S/N.


Dynamic range of Model 4035 is extended to 100 dB or more on account of a higher signal to noise ratio brought about by its new and unique design (See the graph on the right).

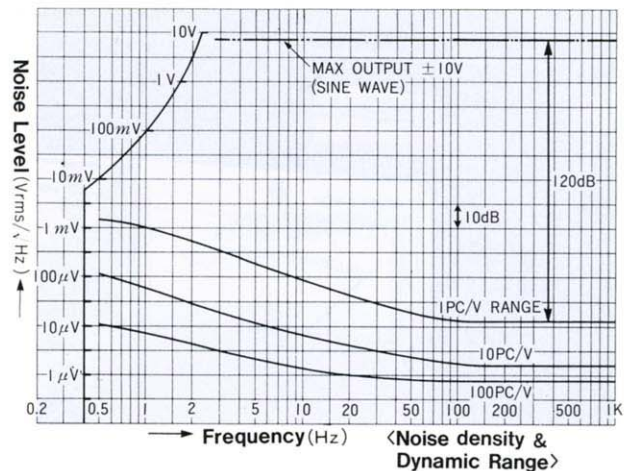

WIDER FREQUENCY BAND MEETING WITH VERSATILE VIBRATORY PHENOMENA.

Model 4035 has such a wide frequency band of 0.5 Hz to 100 KHz and is therefore able to measure almost all sorts of dynamic phenomena (See the graph on the right).

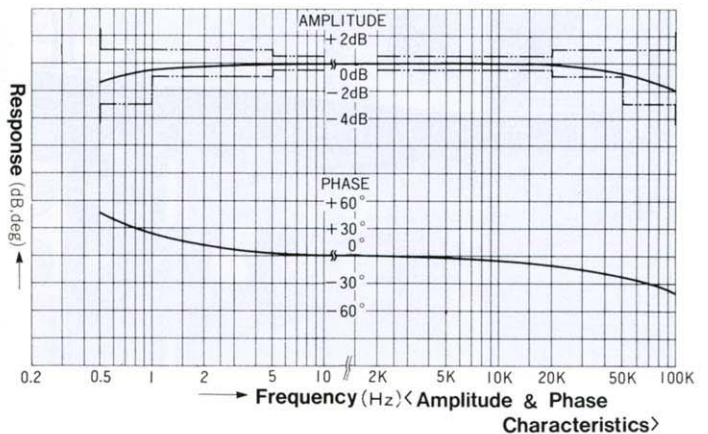

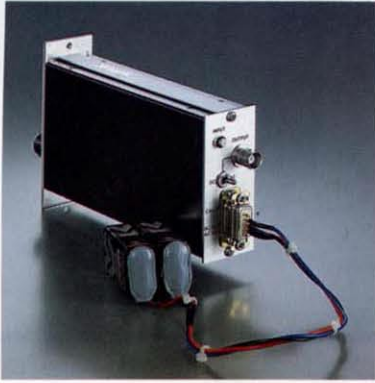

USE AS A SINGLE UNIT

Single Unit of Model 4035 can operate on 2 pcs. of 006P (9V) battery. Long term measurement can be made on a stabilized voltage power supply of $\pm 15V$.


As AC output and DC output (Option) can be led out through the connector on the rear side, versatile applications, including use as a pre-amplifier to be left on the spot, or level recording to be directly made on a pen recorder, are possible.



ENRICHMENT OF PERFORMANCES THANKS TO ULTRA-MINIATURIZATION

Miniaturization has been successfully accomplished in Model 4035 as panel dimensions and volume of this Model are almost 1/3 and 1/5, respectively, of customary charge amplifiers.

DIMENSIONS OF MODEL 4035 (STANDARD VERSION)-(Unit: mm.)

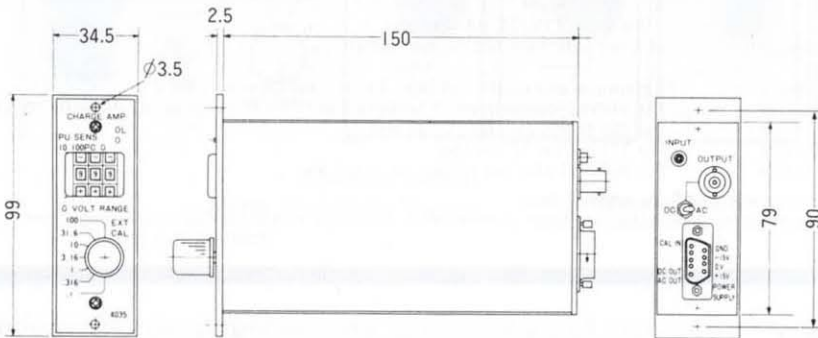

COMPATIBLE PICKUPS (Piezo-Electric Type Pickups)



Models	2300	2304	2309	2305	2302	2313
Sensitivity	45PC/G	45PC/G	180PC/G	9PC/G	35PC/G	9PC/G
Resonance Frequency	25KHz	20KHz	10KHz	32KHz	2KHz	40KHz
Max. Acceleration	1000G	1000G	500G	5000G	100G	1000G
Dimensions	14φ × 27mm	14φ × 28.5mm	17φ × 33.5mm	12φ × 16mm	5□ × 11.5mm	25.5□ × 16mm
Weight	32gr	33gr	68gr	14gr	1gr	75gr
Notes	General Use	With Top Connector	High Sensitivity Type	Shock Measurement	Light Weight Version	3-direction Measurement

N.B. Any piezo-electric pickups other than the above listed can be used with Model 4035.

SHOWA Always satisfying needs for Safety and Comfortability.

SHOWA SOKKI CORPORATION

Akiba Bldg., 3-3, Akihabara, Taito-ku, Tokyo, 110 JAPAN.
 Phone: 03-251-5390 FAX: 03-258-4677
 Factory: 1-8, Sanda-cho 5-chome, Hachioji, Tokyo, 193 JAPAN.
 Phone: 0426-64-3232



312, Sai Chambers, Near Santacruz Bus Depot,
 Santacruz (East), Mumbai - 400 055
 Telephone: +91-22-6697 6816/ 67
 Fax: +91-22-2610 9608
 Email: sales@suntek-services.com
 Website: http://www.suntek-services.com